



Weaver U Rifle Mount Manual

Content

Description

Package Contents

Installation Procedure

Mount position options

Legal Compliances and Disclaimers

Description

Pulsar universal mounts are designed for installation of digital and thermal imaging riflescopes on a hunting shotgun.

The mounts are compatible with the mounting prism of the Talion, Digisight / Digisight Ultra, Apex, Trail riflescopes.



The length of Weaver U mounts - 177 mm.


The distance between the centers of the screws securing the mount to the weapon rail (Weaver/Picatinny) is 87 mm.

Package Contents

- Mount
- Mounting screws (4 screws M6x12, 2 screws M6x18)
- Allen keys (S2.5; S4)
- User manual

Installation Procedure

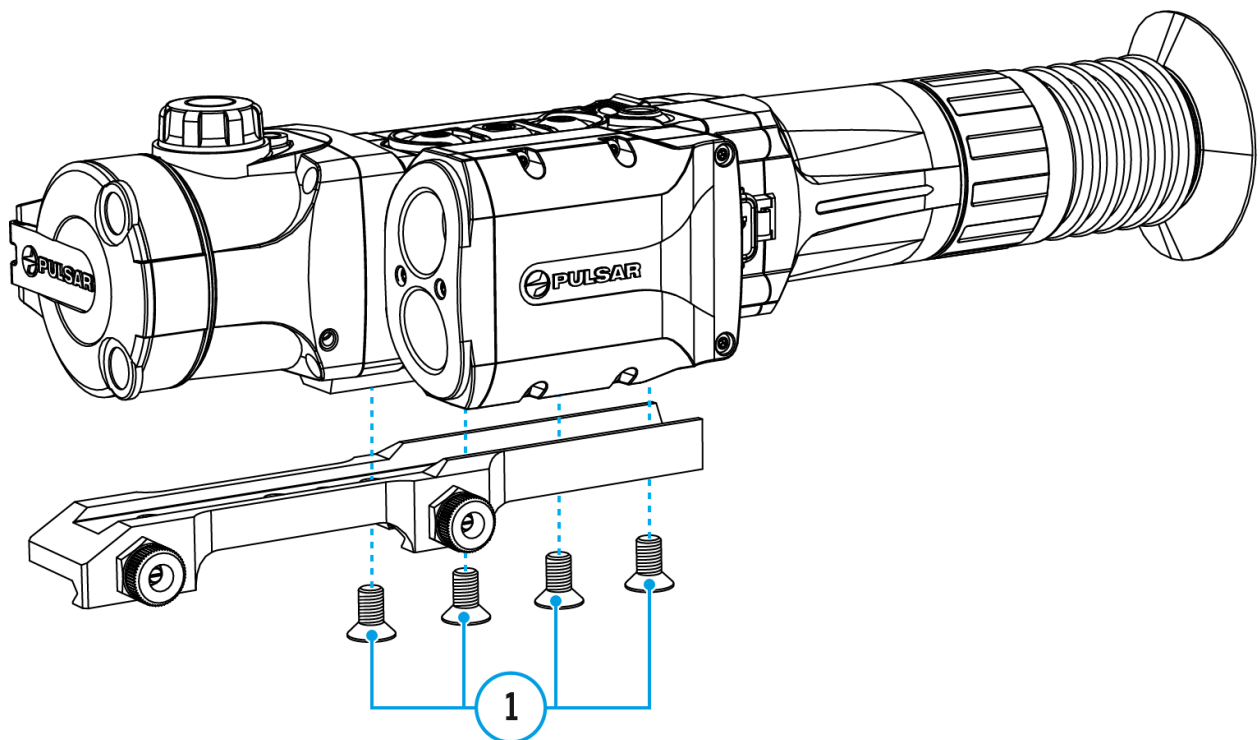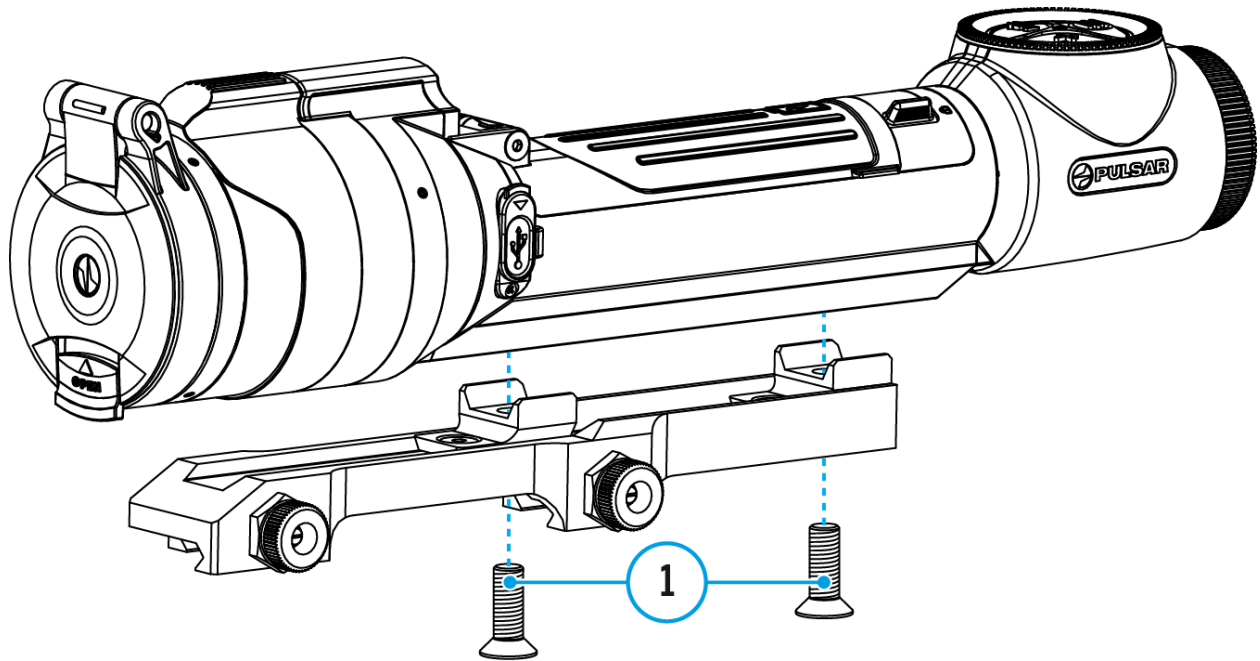

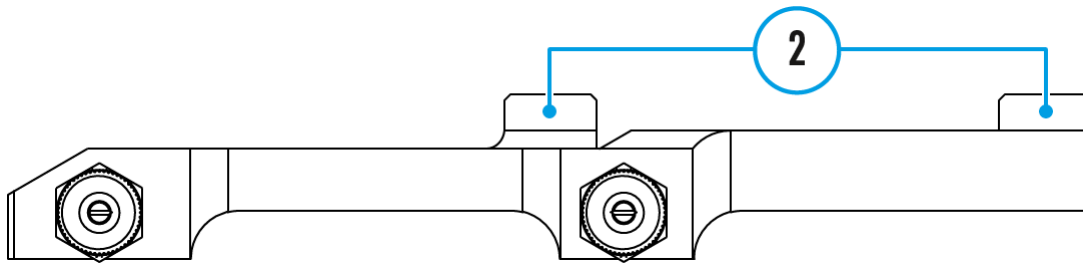

Important

- Mounting slots in the riflescope base allow you to install the mount into one of several **positions**. Choosing the position of the mount helps to ensure correct eye relief, depending on the type of hunting shotgun.
 - Weaver U mounts can be attached using either two, three or four screws depending on the riflescope model and the selected mount position.
 - To install the mount on Digisight/Digisight Ultra, Apex, Trail riflescopes, disconnect the adapters **(2)** using an S2.5 Allen key.
-


Installation

1. Attach the mount to the riflescope base using an S4 Allen key and screws **(1)**(clamping force - 4 Nm/35.4 in-lbs).
2. Mount the riflescope on the weapon rail and make sure the chosen position is comfortable.
3. Remove the riflescope from the weapon rail.
4. Unscrew the screws one by one, apply a drop of *Loctite* and screw back until it stops (clamping force - 4 Nm/35.4 in-lbs). Allow the *Loctite* to dry for some time.
5. Install the mount with riflescope on the weapon rail.
6. The riflescope is ready for zeroing.


Mount position options

With adapters for a Talion riflescope

To ensure the optimal riflescope position on the mount, you can change the position of the adapters using a hex key S2.5.

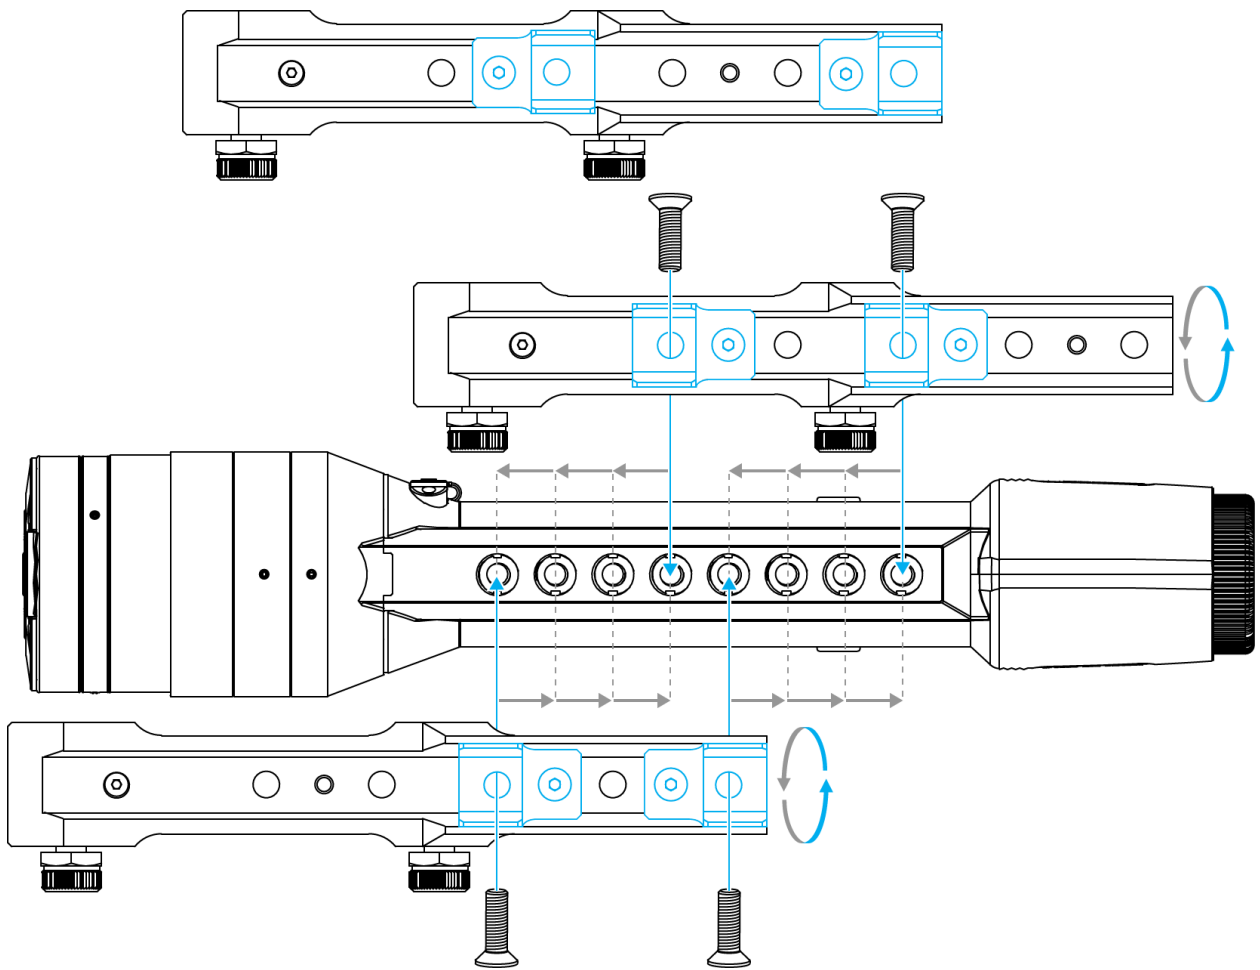

Without adapters

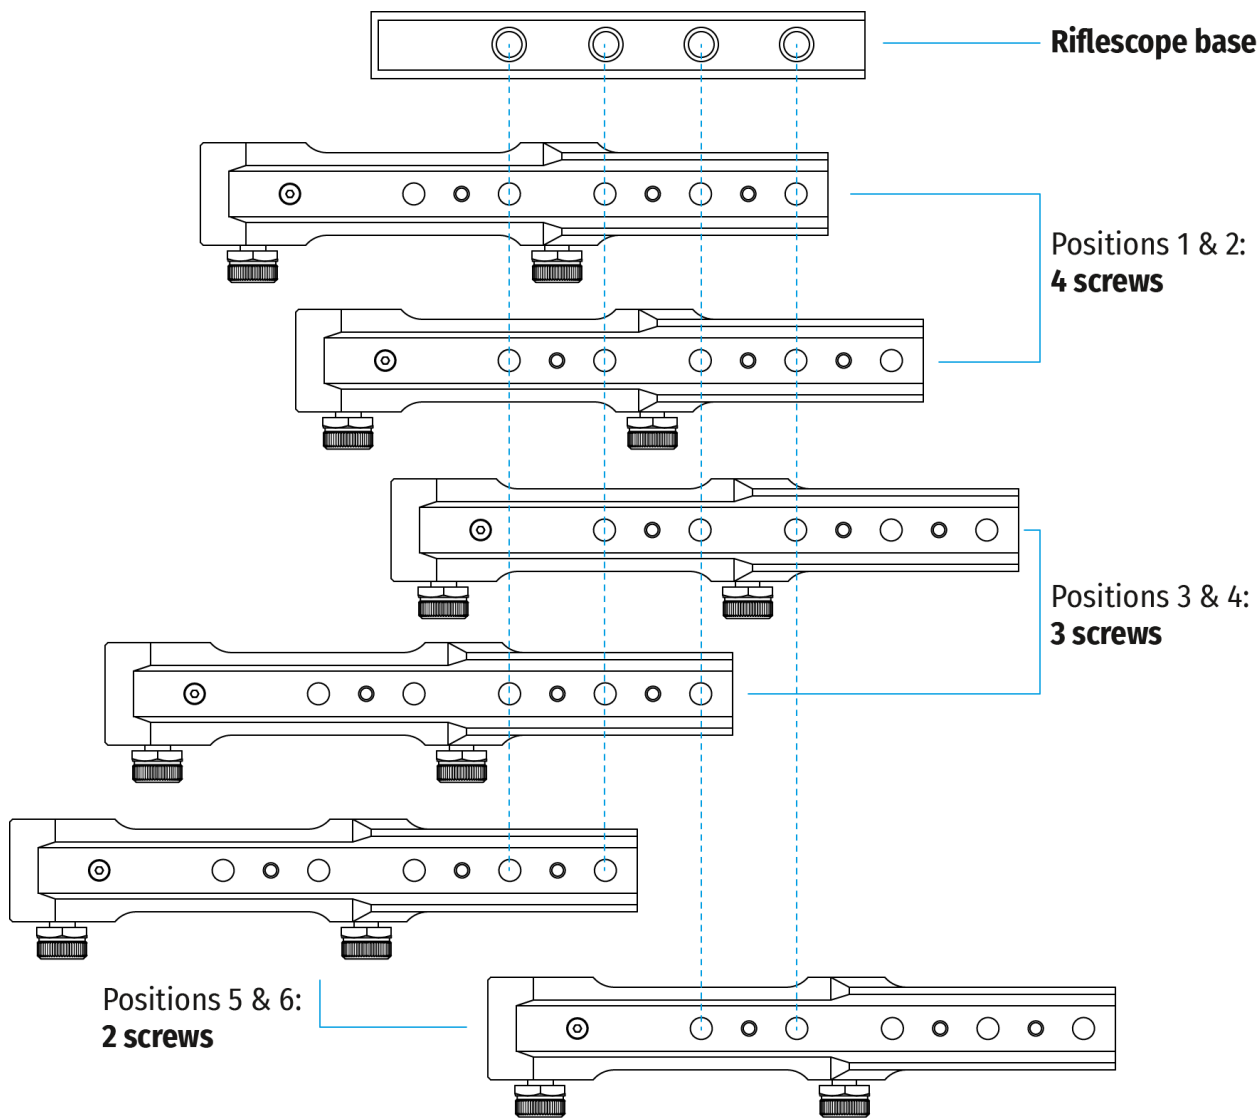

Legal Compliances and Disclaimers

The manufacturer reserves the right at any time, without mandatory notice, to make changes to the package contents, design and characteristics that do not impair the quality of the product.

For technical support please contact support@pulsar-vision.com.

Answers to frequently asked questions about the devices can also be found in the [FAQ](#) section.